 


Game Controller Super Converters

 
PS3/PS4 ↔ PS2 Controller Adapter

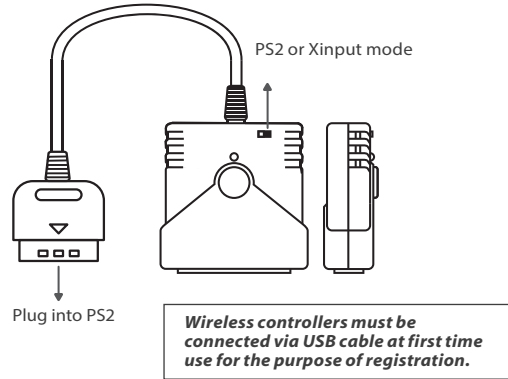

step.1
Connect the converter to PS2.

step.2
Connect the PS3/PS4 game controller to the converter via a standard USB cable. The registration of the controller starts automatically.

step.3
The USB cable is removed and the controller is ready for wireless use.
*Please note that this process only needs to be completed once.

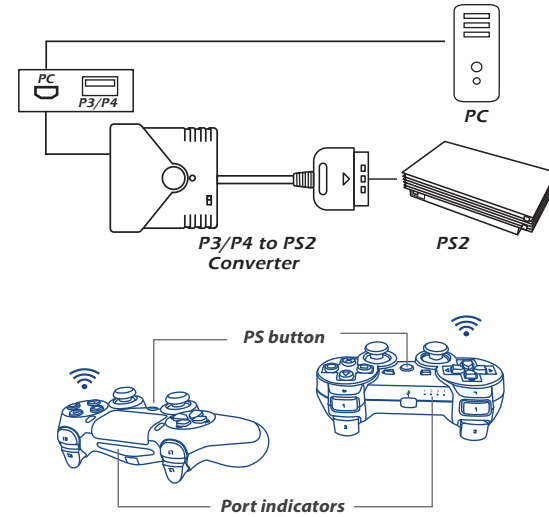

- Each converter is for one PS3/PS4 game controller at a time.
- Wireless PS3/PS4 controllers connect to the converter automatically. In case they don't, please try to re-register the controller with USB cable.


PS2	PC (X-Input)	PS4	PS3
Dpad-UP	Dpad-UP	Dpad-UP	Dpad-UP
Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down
Dpad-Left	Dpad-Left	Dpad-Left	Dpad-Left
Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right
X	X	X	X
O	O	O	O
□	□	□	□
△	△	△	△
Start	Start	OPTIONS	Start
Select	Select	SHARE	Select
Lx	Lx	Lx	Lx
Ly	Ly	Ly	Ly
Ry	Ry	Ry	Ry
Rx	Rx	Rx	Rx
L1	L1	L1	L1
R1	R1	R1	R1
L2	L2	L2	L2
R2	R2	R2	R2
L3	L3	L3	L3
R3	R3	R3	R3
ANALOG	XBOX	PS Key	PS Key

Procedure for assigning a Turbo button

step.1
Press the PS and SELECT buttons (Press the PS and SHARE buttons for PS4 Gamepad) at the same time.



 step.2
Press the SELECT button (Press the SHARE button for PS4 Gamepad) and the button you want to assign as the Turbo button at the same time. More than one button can be chosen.

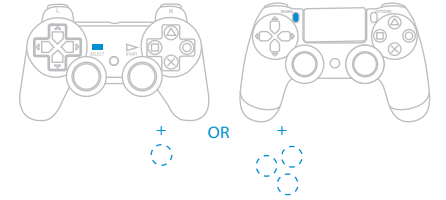

step.3
Press the START button (Press the OPTIONS button for PS4 Gamepad) to complete the setting.



step.4
Press the PS button to exit the setting mode.



Procedure for clearing a Turbo button assignment

step.1
Press the PS and SELECT buttons (Press the PS and SHARE buttons for PS4 Gamepad) at the same time.



step.2
Press the SELECT and START buttons (Press the SHARE and OPTIONS buttons for PS4 Gamepad) at the same time to clear the current setting.



step.3
Press the PS button to exit the settings mode.



Procedure for customizing buttons

step.1
Press the PS and START (Press the PS and OPTIONS buttons for PS4 Gamepad) buttons at the same time.



step.2
Transfer a function from one button to another.

(Example: You want to use □ to do what ○ does now.)

1. Press the ○ button.
2. Press and hold the SELECT button (Press and hold the SHARE button for PS4 Gamepad), then press the □ button.
3. Press the START button (Press the OPTIONS button for PS4 Gamepad) to complete the setting.



step.3
Press the PS button to exit the setting mode.

Transfer a function from one button to multiple buttons.

(Example: You want to use X, △ or □ to do what ○ does now.)

1. Press the ○ button.
2. Press and hold the SELECT button (Press and hold the SHARE button for PS4 Gamepad), then press X, △ and □ button one by one.(any sequence will do.)
3. Press the START button (Press the OPTIONS button for PS4 Gamepad) to complete the setting.



Procedure for resetting all customized buttons

step.1
Press the PS and START buttons (Press the PS and OPTIONS buttons for PS4 Gamepad) at the same time.



step.2
Press the SELECT and START buttons (Press the SHARE and OPTIONS buttons for PS4 Gamepad) at the same time to clear the customized setting.



 
step.3
Press the PS button to exit the setting mode.



Game Controller Super Converters


Magic Box P2-BL

PS3/PS4 ↔ PS2 Controller Adapter

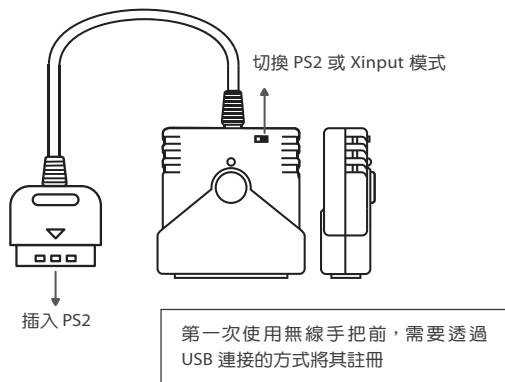

step.1
將 converter 連接到 PS2。

 step.2
將 PS3/PS4 手把接上 converter，手把將自動與 converter 註冊。

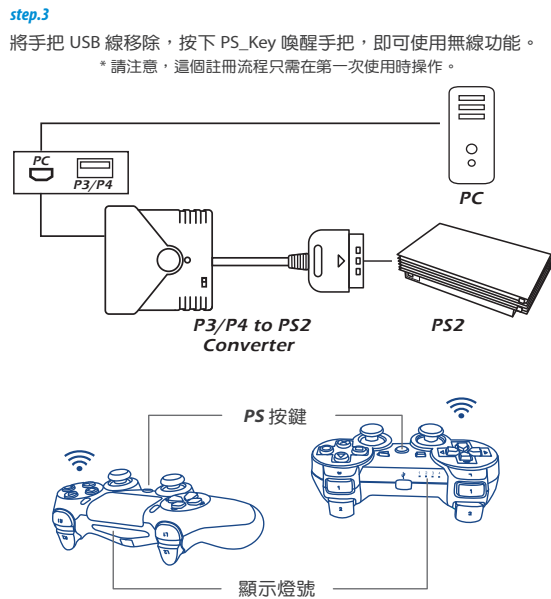

- 請注意每個 converter 一次僅能對應一支 PS3/PS4 手把進行控制。
- 無線 PS3/PS4 手把將會自動連接 converter，如果沒有自動連接，請透過 USB 線將其重新註冊。

1

2

按鍵對應表

PS2	PC (X-Input)	PS4	PS3
DPad-UP	DPad-UP	DPad-UP	DPad-UP
Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down
DPad-Left	DPad-Left	DPad-Left	DPad-Left
Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right
×	×	×	×
○	○	○	○
□	□	□	□
△	△	△	△
Start	Start	OPTIONS	Start
Select	Select	SHARE	Select
Lx	Lx	Lx	Lx
Ly	Ly	Ly	Ly
Ry	Ry	Ry	Ry
Rx	Rx	Rx	Rx
L1	L1	L1	L1
R1	R1	R1	R1
L2	L2	L2	L2
R2	R2	R2	R2
L3	L3	L3	L3
R3	R3	R3	R3
ANALOG	XBOX	PS Key	PS Key

3

Turbo 功能設定步驟

step.1
同時按住 PS 和 SELECT 鍵 (PS4 手把請按 PS 和 SHARE 鍵)。



step.2
按下 SELECT 鍵不放 (PS4 手把請按 SHARE 鍵)，再選擇要設置連發的按鍵，可選擇一個或是多個按鍵。



step.3
按下 START 鍵後 (PS4 手把請按 OPTIONS 鍵)，設定完畢。



step.4
按下 PS 鍵離開設定模式。



4

清除全部 Turbo 功能設定步驟

step.1
同時按住 PS 和 SELECT 鍵 (PS4 手把請按 PS 和 SHARE 鍵)。



step.2
同時按住 SELECT 和 START 鍵 (PS4 手把請按 SHARE 和 OPTIONS 鍵) 即可將設定全部清除。



step.3
按下 PS 鍵退出 Turbo 設定模式。



5

Custom Buttons 功能設定步驟

step.1
同時按住 PS 和 START 鍵 (PS4 手把請按 PS 和 OPTIONS 鍵)。



step.2
將一個按鍵編輯成另一個按鍵的功能時 (舉例：你要將 ○ 變成 □ 的功能)

(舉例：你要將 ○ 變成 □ 的功能)

1. 按下 ○ 鍵。
2. 按住 SELECT 鍵不放 (PS4 手把請按住 SHARE 不放)，再按下 □ 鍵。
3. 按下 START 鍵 (PS4 手把請按 OPTIONS 鍵) 即設定完畢。

將一個按鍵編輯成多個按鍵的功能時

(舉例：你要將 ○ 變成 ×、△ 和 □ 的功能)

1. 按下 ○ 鍵。
2. 按住 SELECT 鍵不放 (PS4 手把請按住 SHARE 不放)，再按下 ×、△ 及 □ 鍵。(任意順序皆可)
3. 按下 START 鍵 (PS4 手把請按 OPTIONS 鍵) 即設定完畢。

step.3
按下 PS 鍵退出設定模式。



6

清除全部 Custom Buttons 功能設定步驟

step.1
同時按住 PS 和 START 鍵 (PS4 手把請按 PS 和 OPTIONS 鍵)。



step.2
同時按住 SELECT 和 START 鍵 (PS4 手把請按 SHARE 和 OPTIONS 鍵) 即可將設定全部清除。



step.3
按下 PS 鍵退出設定模式。



7

8